

Technical Bulletin.

Discs with ABS Rings.

When fitting a new disc that has the ABS ring attached, you may find that the ABS ring on the new disc touches the ABS sensor. This is because corrosion has built up under the ABS sensor mounting point causing the sensor to be pushed towards the disc and wearing the top of the ABS ring on the old disc.



The solution is to remove the ABS sensor from its mounting point and remove any corrosion before refitting the ABS Sensor and new disc.

Similar issues arise with ABS sensors that are fitted in to guide tubes. To remedy the issue, remove the ABS sensor and clean the tube with a suitable reamer.