



EXCLUSIVE TO:



DISCS WITH ABS RINGS: ABS SENSOR ISSUE

When fitting a new disc with an ABS ring, the ring might touch the ABS sensor as corrossions have built up under the mounting point, causing it to be pushed towards the disc.



To fix this issue, remove the ABS sensor from its mounting point and remove the corrosion before refitting the sensor and the new disc.

Similar issues may arise with ABS sensors that are fitted in guide tubes which can be remedied by removing the ABS sensor and cleaning with a suitable reamer.



Need NAPA Know How?

For further information and advice, speak to one of our technical experts on 0117 428 8090 or visit www.NAPAautoparts.eu for technical guides and further information